



SILENT BrassTM

Pickup MuteTM

取扱説明書

Owner's Manual

Bedienungsanleitung

Mode d'emploi

Manual de instrucciones

使用说明书

Руководство пользователя

사용설명서



日本語

English

Deutsch

Français

Español

中文

Русско

한국어



SILENT BrassTM

Pickup MuteTM

Thank you for purchasing the Yamaha SILENT BrassTM Pickup MuteTM. In order to obtain the maximum performance and enjoyment from your Pickup MuteTM, we urge you to read this Owner's Manual thoroughly before using. Please keep this Owner's Manual in a safe place for later reference.



Contents of Set

● Pickup Mute™ PM7X/PM6X/PM5X/PM3X

● Cable

● Owner's Manual (This booklet)

** The Personal Studio™ STX is not included if the Pickup Mute™ was purchased separately.*

■ Pickup Mute™ Specifications

Pickup Mute™	PM7X	PM6X	PM5X	PM3X
Instrument	Trumpet, Cornet	Flugelhorn	Tenor Trombone, Tenor Bass Trombone	French horn
Dimensions (diameter x length)	82 x 139 mm (3-1/4" x 5-1/2")	129 x 143 mm (5-1/16" x 5-5/8")	129 x 220 mm (5-1/16" x 8-11/16")	129 x 216 mm (5-1/16" x 8-1/2")
Weight	70 g (2.5 oz.)	130 g (4.6 oz.)	155 g (5.5 oz.)	195 g (6.9 oz.)

● Common specifications for all models

Internal Microphone: Electric condenser microphone, **Pickup Output Jack:** Mini phone jack,

Nominal Level: -25 dB to -35 dB, **Material:** ABS resin

** Please note that the Pickup Mute™ may not fit some instruments with significantly different bell shapes or bell diameters.
Please check before purchasing.*

** Specifications and design are subject to change without notice.*

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe and handy place for future reference.



WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Do not open

- This instrument contains no user-serviceable parts. Do not open the instrument or attempt to disassemble or modify the internal components in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

Water warning

- Do not expose the instrument to rain, use it near water or in damp or wet conditions, place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the instrument, turn off the power immediately and unplug the power cord from the AC outlet. Then have the instrument inspected by qualified Yamaha service personnel.



CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the instrument or other property. These precautions include, but are not limited to, the following:

Connection

- Before connecting the instrument to other electronic components, turn off the power for all components. Before turning the power on or off for all components, set all volume levels to minimum.
- Be sure to set the volumes of all components at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

Location

- Do not place the instrument in an unstable position where it might accidentally fall over.

Handling caution

- Do not rest your weight on, or place heavy objects on the instrument, and do not use excessive force on the buttons, switches or connectors.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the instrument, or data that is lost or destroyed.

SPECIAL MESSAGE SECTION

SPECIFICATIONS SUBJECT TO CHANGE:

The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

Do not attempt to service this product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.

This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.

IMPORTANT: The louder the sound, the shorter the time period before damage occurs.

NOTICE:

Service charges incurred due to a lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owner's responsibility. Please study this manual carefully and consult your dealer before requesting service.

Disposal Notice:


Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc. If your dealer is unable to assist you, please contact Yamaha directly.

92-BP



The following cautions are for your own safety and to avoid possible damage to and malfunctioning of the equipment, and thus should be observed carefully.

- Firmly insert the Pickup Mute™ into the bell of the instrument.
- Take care not to drop the Pickup Mute™. Dropping may damage the device. It also may damage your hearing due to the loud noise that occurs. Please use caution.
- Do not touch or jab the Pickup Mute™'s microphone component.

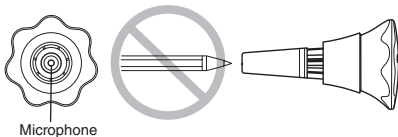

- Avoid stepping on the cable.
- When you are finished playing, remove the Pickup Mute™ from the instrument. Clean any moisture on the Pickup Mute™ with a cloth.

DO NOT WASH WITH WATER.

- If moisture gets on the Pickup Mute™ during or after playing, please dry thoroughly.




Set up and Use


■ Connecting the Personal Studio™ STX and the Pickup Mute™




Before connecting the cable and attaching the Pickup Mute™, make sure the power is switched OFF and the earphones are removed from your ears.

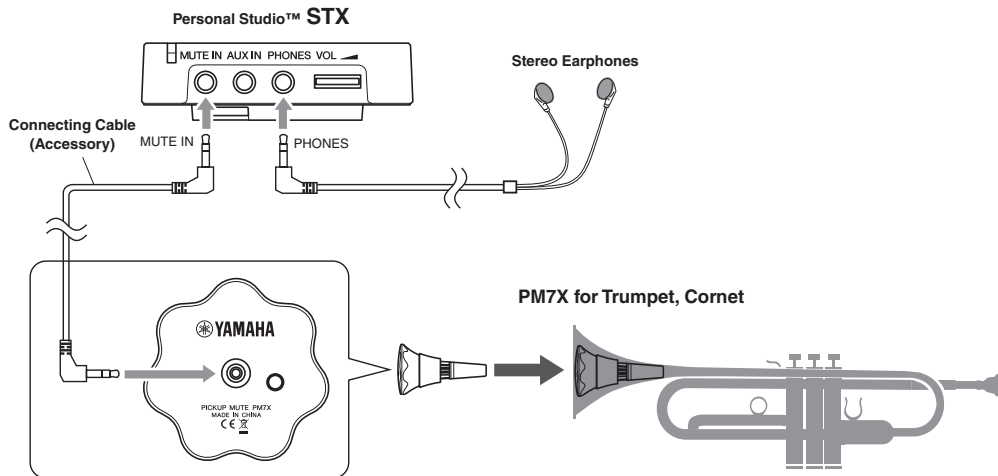


PM6X for Flugelhorn

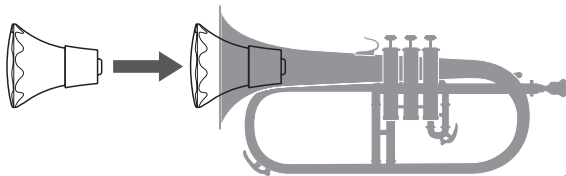

PM3X for French Horn

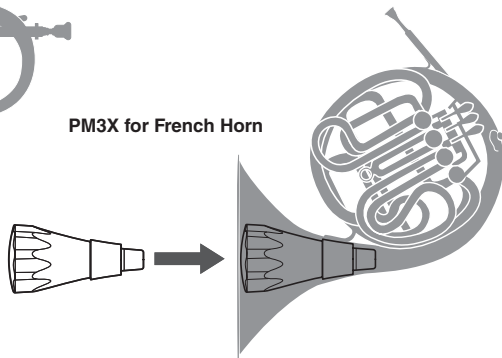


**PM5X for Tenor Trombone,
Tenor Bass Trombone**

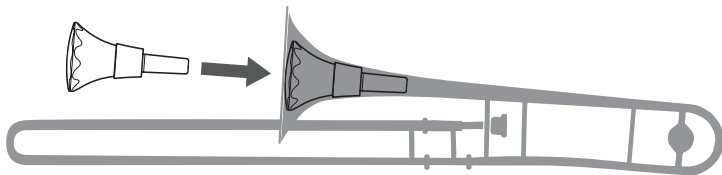



Using the SILENT Brass™

Do not disturb your neighbours during late hours.

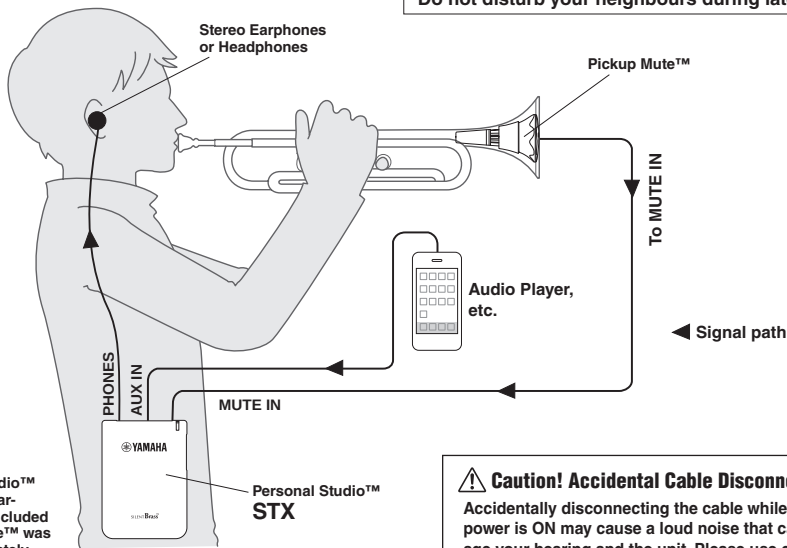


* The Personal Studio™ STX and stereo earphones are not included if the Pickup Mute™ was purchased separately.

Caution! Accidental Cable Disconnection

Accidentally disconnecting the cable while the power is ON may cause a loud noise that can damage your hearing and the unit. Please use caution.

Attaching the Pickup Mute™ PM7X/PM6X/PM5X/PM3X


Holding the Pickup Mute™ in your right hand, use a rotating motion to insert the Pickup Mute™ firmly into the instrument while holding the instrument securely in your left hand.

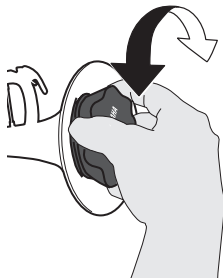


Holding the French Horn

Use either of the methods shown below to support both the Pickup Mute™ and the instrument at the same time.

Hold the instrument with your right hand placed over the edge of the Pickup Mute™ and the base of your thumb on the Pickup Mute™.

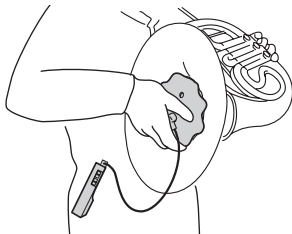

Hold the instrument with the base of your right hand thumb gently positioned on the Pickup Mute™, and use your other fingers to hold the outer rim of the bell.

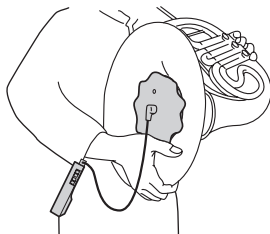

- * Do not block the breather hole on the Pickup Mute™ when holding the instrument.
- * Never apply excessive force to the cable.
- * Always remove the Pickup Mute™ before emptying the instrument.