



FAZLEY

LPR-01
“Loopin’ Larry”

Contact:
Fazley Musical Instrument Products and Accessories
Verrijn Stuartweg 18
4462 GE Goes
The Netherlands

Specifications

Power: DC9V

Current: 70mA


Dimension: 94mm (L)x42mm (W)x48 mm(H)

Weight: 147g



Power input. Using only 9V adapter negative tip.

Power

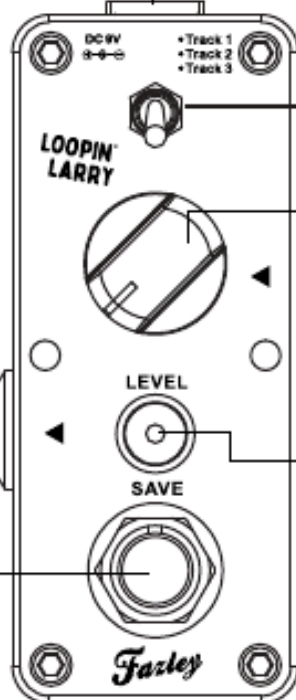

Track Switch

Adjust level output.

Level

1/4" mono signal output, connect amp.

Output

Input

1/4" mono signal input, connect guitar.

Switch

Press to control functions. See details at Operation Directions.

Save \ LED

Press and hold the button when stop to save. LED indication as below diagram.

Micro USB Jack

Download and upload files of each track.



Lever designed to prevent stamping on operation knobs.



Caution, from serial no. 221102-221201 this device will have an USB C connector and cable. Due to the implemented change it's possible to receive either version for some time.

Operation	Function	LED
Press switch	Start recording	Red
Press switch when recording	Play recorded music	Green
Press switch when playing	Overdub	Red
Press and hold switch when playing	Delete or recover the previous layer	Green flashing
Double presses switch when playing	Stop	Green flashing
Press and hold switch when stop	Deleted all files	Off
Press and hold SAVE when stop	Save files	Red flashing

FEATURES

1. High speed recording at 52M per second.
2. Independent 3 storage tracks which means 3 single loopers in 1.
3. SAVE button to choose the satisfied recording as the basic layer.
4. USB cable to download or upload music files to or from PC.

HOW TO USE

1. Connect power and input/output cables. If no data inside the current selected track, no light On. Press the switch to start recording. If any data inside the current selected track, a green light flashing indicates recording paused. Press the switch to play the music inside.
2. When it is under music play, pressing the switch to overdub. The light turns red from green color. When it is under recording, press the switch, it turns to play the recorded music, and the light turns green.
3. When it is under music play, pressing and hold the switch

to delete the previous overdub. Another pressing and hold the switch to recover the deleted previous overdub. If no overdub music, press and hold the switch to delete the initially recorded music. No limit to overdub layers.

4. When it is under music play, double presses on the switch, the pedal stops. Press and hold SAVE button to save all the initial and overdubbed music files under the current selected track. If no press on SAVE button, the downloaded file under the current track contents no overdubbed layers. Notice that the latest overdub can not be deleted when the whole track is saved.
5. When the pedal stops, press and hold the switch to delete all the recorded music of the current selected track.
6. Total 3 tracks of memory spaces to record. The space room is equally divided. Each track can be recorded up to 30 minutes.
7. The 3 tracks can be selected via the top toggle switch. Each track files can be managed seperately, no influence to each other.