 




CR3504A
Finn Radio CD Player
Instruction Manual

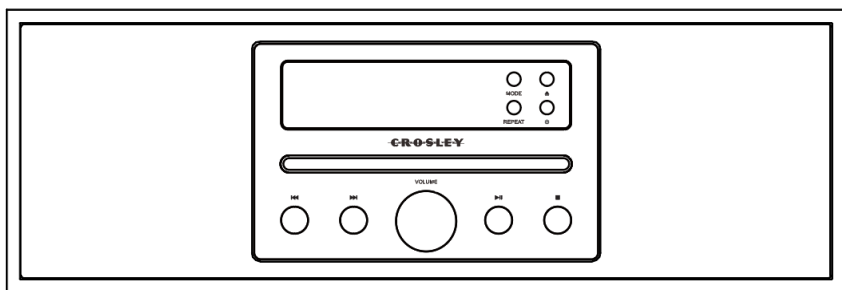

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 6 p.m., EST, Monday – Friday
1-888-CROSLEY
www.crosleyradio.com

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storms or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Radio
- Power adaptor
- Remote Control

Please contact Crosley customer service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**



Specifications

Power	AC power adaptor, DC output 12 V 2A
Power consumption	24W
Speaker	3", 6Ω, 10W x 2
Frequency Range	FM 87.5 – 108 MHz


Note:

- *Design and specifications are subject to change without notice.*
- **To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.**

  Product Description

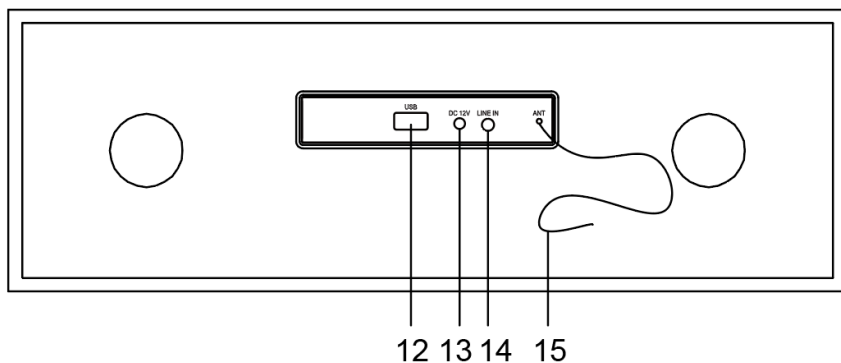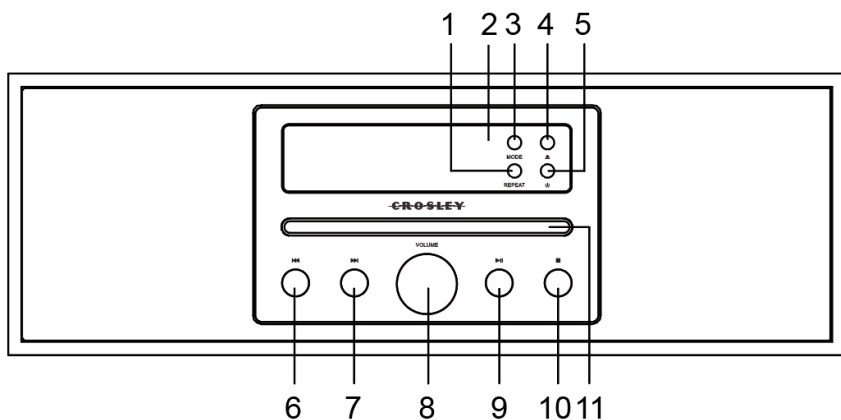

- | | |
|------------------------------|----------------------|
| 1. Repeat Button | 9. Play/Pause Button |
| 2. Standby Light | 10. Stop Button |
| 3. Mode Button | 11. CD Tray |
| 4. CD Door Open/Close Button | 12. USB Jack |
| 5. Power Button | 13. Power Jack |
| 6. Backward Skip Button | 14. Line In Jack |
| 7. Forward Skip Button | 15. Wire Antenna |
| 8. Volume Knob | |

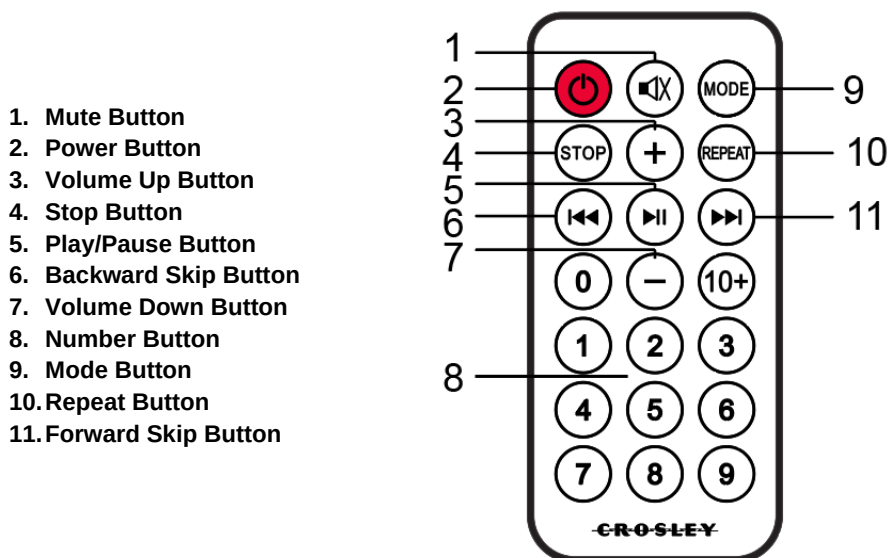 

Initial Setup

Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Connect AC adaptor to the Power Jack of the unit. The red Standby Light will appear indicating unit has power.
3. Untie the FM Antenna and allow it to hang in a straight line.
4. Press the Power Button to turn on the unit.

Note:

- Do not plug the AC power adaptor to power outlet before all the assembly is completed. Before turning the power on, make sure again all the connection settings are correct. Always turn off the power when connecting or disconnecting.

Line Input Connection

You can connect an audio device to this unit and play your music through its speakers. To do this, connect the 3.5mm auxiliary cable (not included) between your audio device, and the Line In Jack of this unit, press the Mode Button until Line In Mode is selected and start playing the music.

Bluetooth Operation

1. Press the Mode button until the Bluetooth mode has been selected, you will hear an activation sound from the unit.
2. Turn on the Bluetooth feature of your audio device, search for “CROSLEY CR3504A” and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.
5. To forward skip, short press the Forward Skip Button.
6. To backward skip, short press the Backward Skip Button.
7. To pause the playback, short press the Play/Pause button.

Note: Bluetooth version – 5.0

Radio Operation

1. Press the Mode button until the Tuner mode has been selected.
2. To set auto scan station press and hold the Play/Pause button to activate automatic programming. All available stations are programmed in the order of waveband reception strength.
3. Short press the Forward and Backward Skip Button to change the preset radio station.
4. Long press the Forward and Backward Skip Button to manually tune the radio to the other frequencies.

Note: While manually tuning the radio, if you miss your radio frequency you can short press the Forward or Backward Skip button to fine tune the radio frequency by 0.1MHz. The fine-tuning feature will only last for two seconds after either A.) a long press while manually tuning or B.) a short press while in fine tuning.

CD Playback Operation

1. Press the Mode button to select the CD function.
2. Press the Open/Close button to open the CD tray and put the CD in the tray with the labeled side facing up.
3. Press the Open/Close button again to close the tray. The LED display will show “Load” for a few seconds, then starts playing tracks.
4. During playback, press the Play/Pause button to pause the CD. Press it again to resume playback.
5. To skip to the next or previous track, press the Forward Skip or Backward Skip Button correspondingly.
6. To search fast forward or backward, press and hold the Forward Skip or Backward Skip Button correspondingly until you reach the desired time.

7. To repeat a specific track, press Repeat Button once while that track is playing. To repeat all the tracks, press the Repeat Button again, "ALL" will appear on screen. To cancel the repeat function, press the Repeat Button again.
8. Press the Stop Button twice if you want to completely stop playback.
 - To quickly skip to 1-9 tracks, press the corresponding number keys (1-9).
 - To quickly skip to track 10, press the number key (10+).
 - To quickly skip to tracks 10+, press the number key (10+).
For example: the 15th song, press number key (10+) and (5).
 - To quickly skip to tracks 20+, press the number key (10+) twice.
For example: the 25th song, press number key (10+) twice and press number key (5).

For MP3 CD's

Press the number keys to select the tracks.

For example, the 38th song, press the number key (3) and number key (8).

USB Playback

1. Insert a USB device into the USB Jack and playback will start automatically.
2. To forward skip, short press the Forward Skip Button.
3. To backward skip, short press the Backward Skip Button.
4. To pause the playback, short press the Play/Pause button.

Note: Only use 32 GB or smaller USB.

Troubleshooting

There is no power

- No power at the power outlet.
- If using a surge protector/power strip ensure it is on.
- Ensure power plug is properly inserted.
- To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, turn off the power and turn it on again.

CD does not play

- Function mode is not set to CD.
- The CD is blank.
- The CD is placed on the tray incorrectly with the label side facing down.
- The CD has too many scratches or is dirty.

Bluetooth not connecting

- Forget the device then try connecting again.
- Ensure you are not too far away from the unit when connecting.
- Try a different device (i.e. phone, MP3)
- Ensure device (i.e. phone, MP3) is charged and not low on battery.
- Try to disable Wifi and attempt to connect to Bluetooth.
- Power cycle both devices and try steps to connect again.

FCC Statements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Modern Marketing Concepts Inc. dba Crosley Brands, declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://crosleybrands.com/euDoC>