


W41

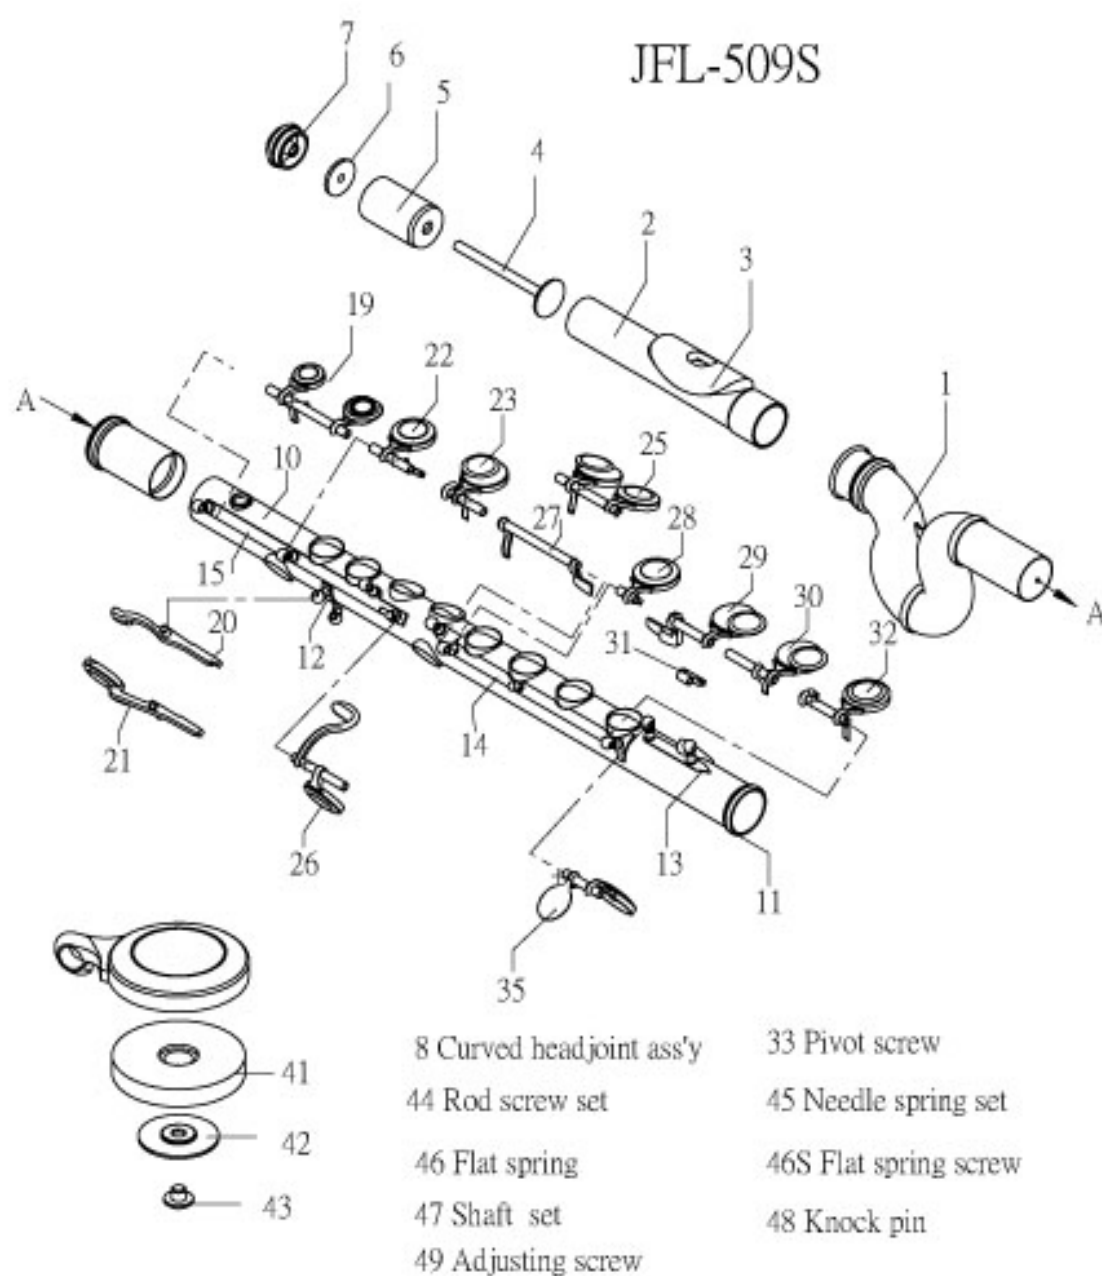

Parts list

ref_no	parts	Part_desc
1	51-U0001S	Bow headjoint ass'y
2	51-N0020S	Straight headjoint ass'y
3	51-N0021S	Lip plate
4	51-N001S	Flute head stopper screw
5	51-C101	Flute head stopper cork
6	51-N601	Flute head stopper nut
7	51-N404S	Flute head crown
8	SFLH-509S	Curved headjoint ass'y
10	51-D0042S	Body ass'y w/out keys
11	51-D405S	Body ring
12	51-W0022S	Key post ass'y
13	51-W0025S	Key post ass'y
14	51-W0031S	Key post ass'y
15	51-W0051S	Key post ass'y
19	51-K0225S	C key
20	51-K0289S	Bb thumb lever
21	51-K0288S	B key
22	51-K0227S	Bb key
23	51-K0220S	A key
25	51-K0221S	G key
26	51-K0228S	G# key
27	51-K0080S	Bb lever
28	51-K0067S	F# key
29	51-K0222S	F key
30	51-K0223S	E key
31	51-K4008S	Joint key
32	51-K0224S	D key
33	51-C205	Pivot screw
35	51-K0230S	D# key
41	51-P0009	Pad set
42	51-A301	Pad metal washer for
43	51-C202	Pad screw
44	51-C006	Rod screw set
45	51-S001	Needle spring set
46	51-S101	Flat spring
46S	51-C204	Flat spring screw
47	51-C007	Shaft set
48	51-A5002	Knock pin
49	5A-C2003	Adjusting screw